


FS-9100DN, FS-9500DN, FS-9120DN, FS-9520DN Replenishing Toner

This section explains how to replace the toner container. When replacing the toner container, always replace the waste toner box at the same time. If this box is full, the printer may be damaged or contaminated by the waste toner that may spill over the box.


NOTE: During toner container replacement, temporarily put storage media and computer supplies (such as floppy disks) away from around the toner container. This is to avoid damaging media by the magnetic content of the toner.

You do not have to turn printer power off before starting the replacement. Any data that may be under printing process in the printer will be deleted if you turn printer power off.

- 1 Open the printer front cover all the way.

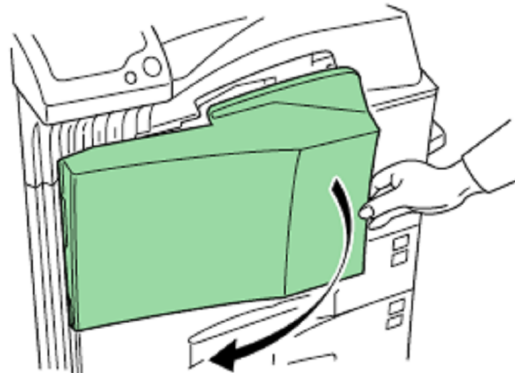


- 2 Push the lock lever up and gently remove the toner container until its handle appears.

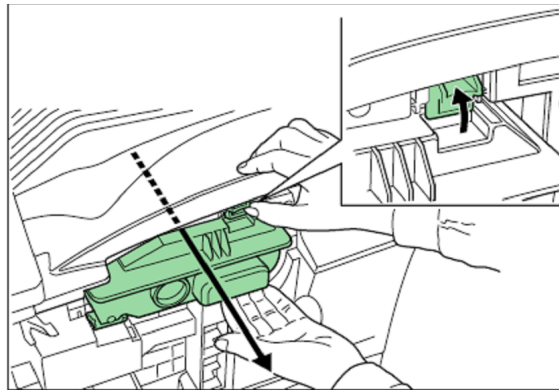


NOTE: Do not pull the toner container all the way out as it can fall.


- 3** Grasp the handle on the toner container, push the lock lever up again and gently lift the toner container.

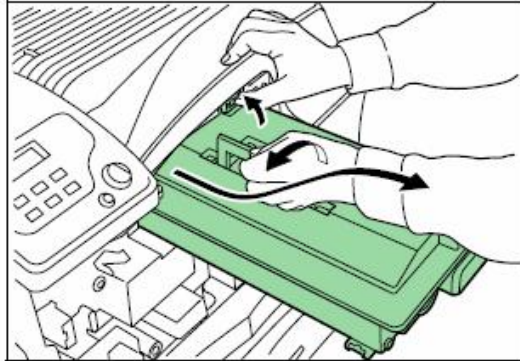


- 4** Seal up the old toner container with the supplied plastic bag and dispose of it.

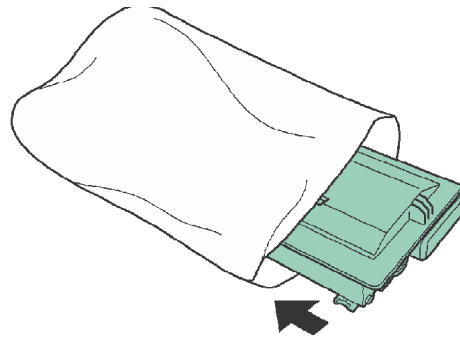


- 5** Lightly tap the new toner on the top 5 to 6 times.

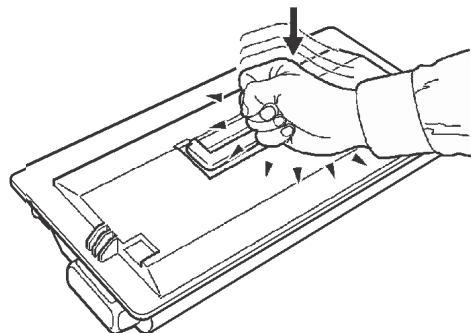


- 6 Thoroughly shake the toner container (in the direction of the arrows) ten times or more to loosen and mix the toner inside.

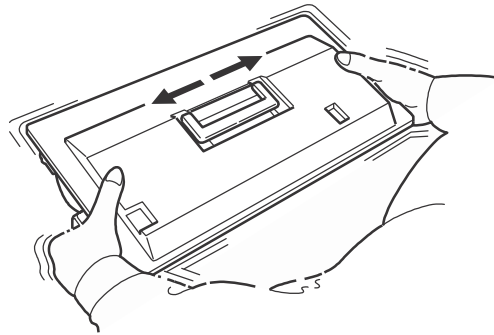


- 7 Grasp the handle on the toner container and insert the toner container along the rail of the printer.

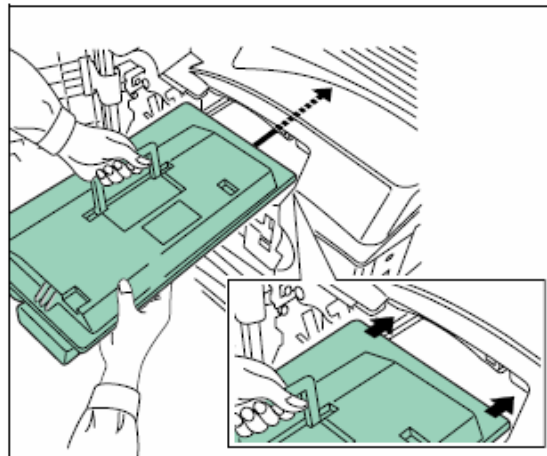

When inserting, be sure that the gear side of the toner container faces the printer. Leave the front cover open to allow insertion of the waste toner box.

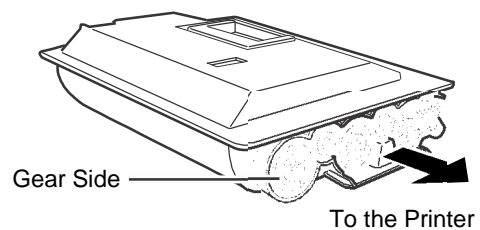

- 8 Hold the toner container using both hands and fully insert it into the printer.

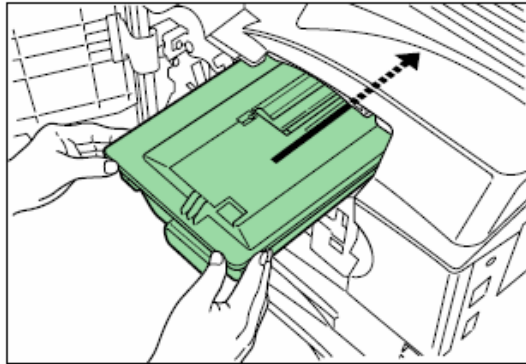


- 9 Close the front cover.

Replacing the Waste Toner Box


When replacing the toner container, the used waste toner box in the printer should also be replaced with the new one from the new toner kit. The printer will not operate without replacing the waste toner box.

The old waste toner box has two stickers (explained as A and B) at the front. These stickers are used to seal the opening to prevent the waste toner from spilling out.


- 1 Open the printer front cover all the way.
- 2 Remove the old waste toner box as shown in the figure.

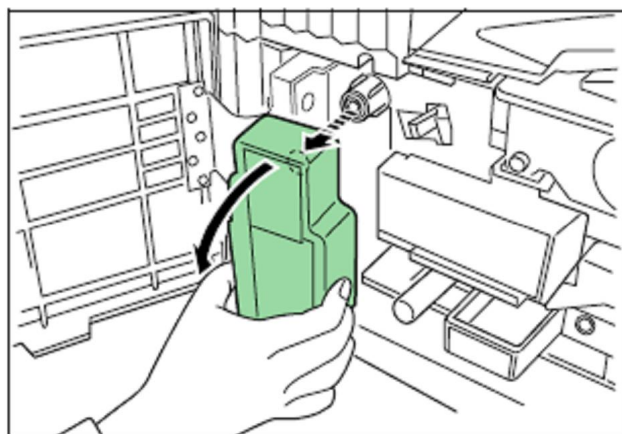


- 3** Peel sticker A off the waste toner box.

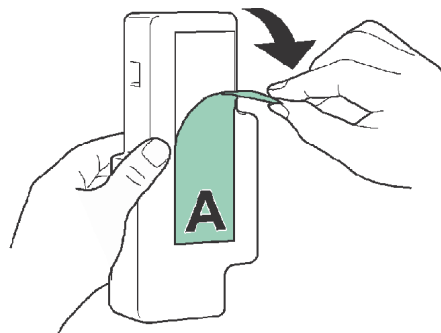


- 4** Turn around the waste toner box. Stick sticker A over the opening at the back.

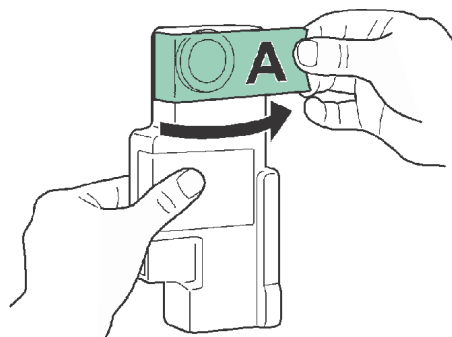


- 5** Peel off the backing paper to gain access to sticker B.

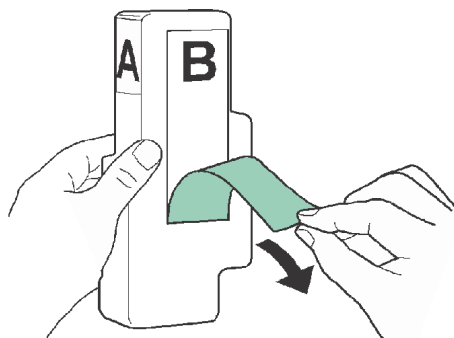


- 6** Peel sticker B off the waste toner box.

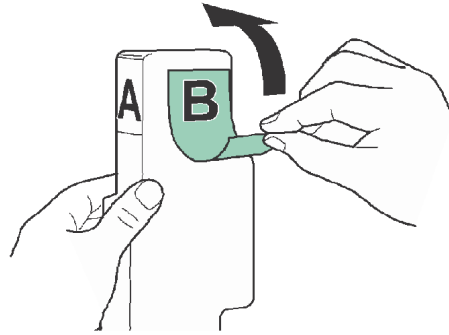


- 7** Stick sticker B down over top of sticker A at the back.

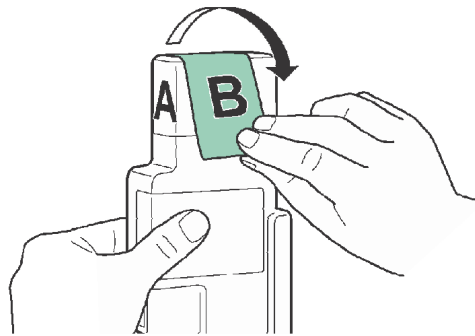

- 8** Seal up the old waste toner box with the supplied plastic bag and dispose of it.

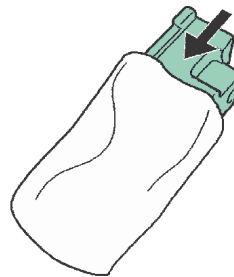

- 9** Fit the new waste toner box to the printer.

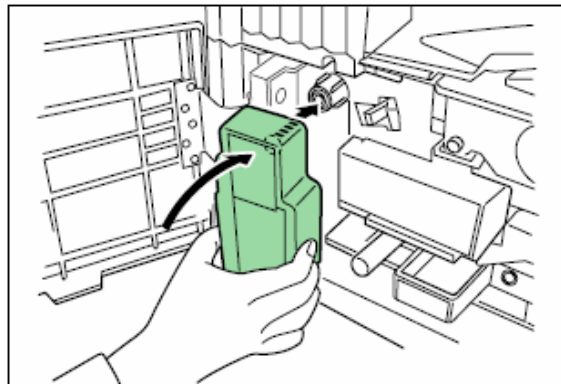

- 10** Close the front cover