

Replacing the Toner Container FS-C8100DN


This section explains how to replace the toner containers. When replacing the toner container of any colour, always replace the waste toner box at the same time. If this box is full, the printer may be damaged or contaminated by the waste toner that may spill out of the box.

NOTE: During toner container replacement, temporarily put storage media and computer supplies (such as floppy disks) away from around the toner container. This is to avoid damaging media by the magnetism of the toner.


You do not have to turn the printer power off before starting the replacement. Any data that may be in the process of printing in the printer will be deleted if you turn the printer power off.

To replace the toner container, first make sure of the colour of the toner container requiring replacement. In this example, it is assumed that you are replacing the black toner container.


- 1 Open the front cover.

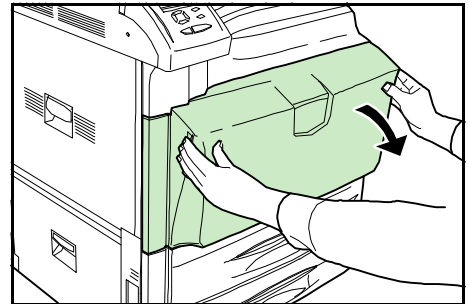


- 2 Turn the toner container lock lever clockwise and set it to the upright position.

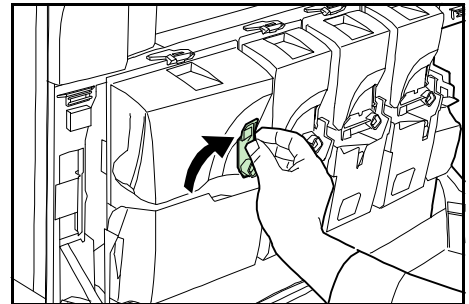


- 3 Push and lift up the clip on the upper part of the toner container (A), and then pull the toner container.

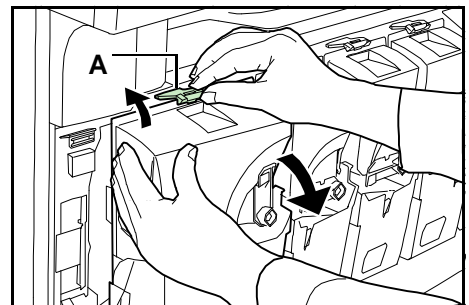


- 4 Remove the toner container.

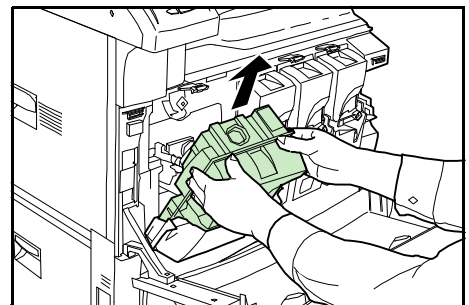

- 5 Cover the toner hole with the cap on the rear side of the container.

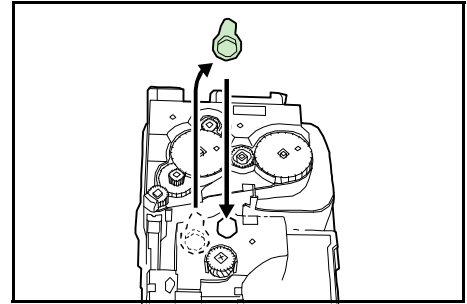


- 6 Insert the container into the plastic bag provided for empty containers.

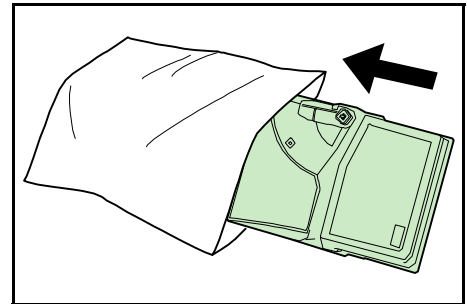


- 7 Remove a new toner container from the carton box.

- 8 Hold the new toner container with the toner container lock lever up, and tap the upper part of the container 10 times or more. Do not tilt the container.

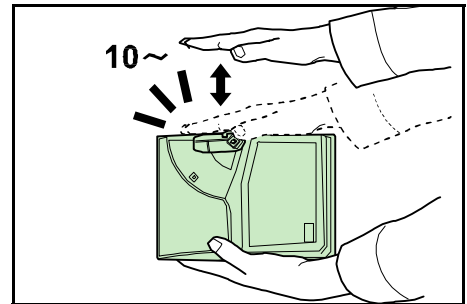


- 9 Hold the toner container with both hands as illustrated, and shake the container strongly 10 times or more.


IMPORTANT: Shake the container fully. Otherwise an error may occur due to short supply of toner.

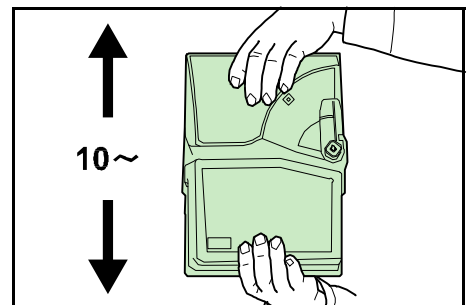


- 10 Set the new toner container into the printer.

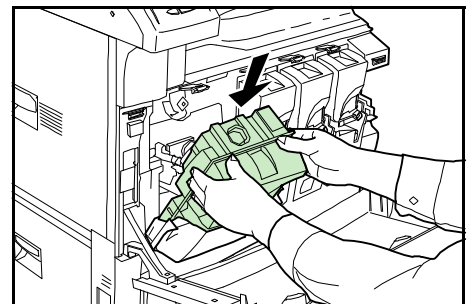

- 11 Be sure to insert the upper part of the container until you hear a clicking sound. When the toner container is correctly set, it will be locked.

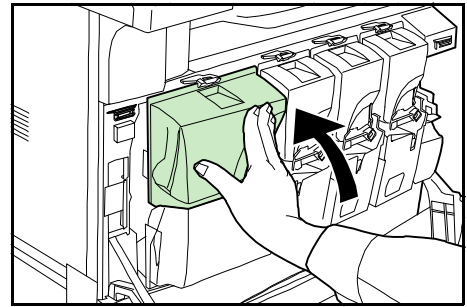


- 12 Set back the toner container lock lever to the original position.
Replace other colour toner containers in the same way.

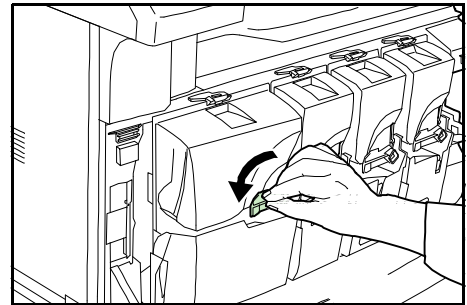


- 13 Press the release lever of the waste toner box (B), and then pull out the waste toner box slowly.


NOTE: Do not place the used waste toner box upside down.

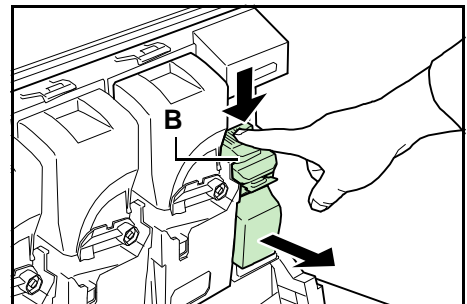


- 14 Secure the cap on the used waste toner box as illustrated.

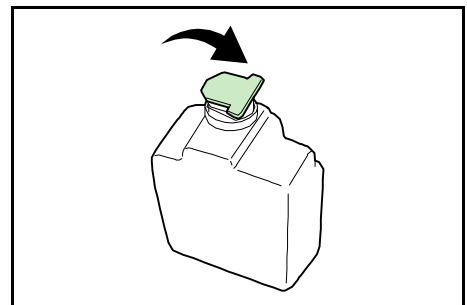


- 15 Insert the used waste toner box into the plastic bag provided for waste toner boxes.

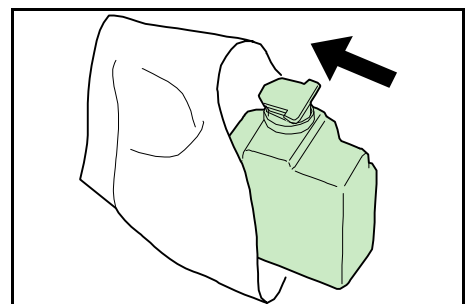

- 16 Open the cap of the new waste toner box.

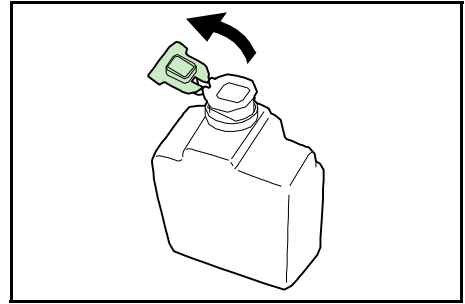

- 17 Set the new waste toner box in the printer.

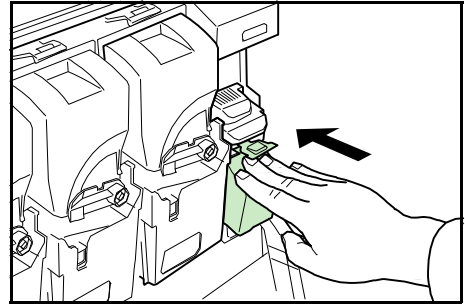

- 18 Close the front cover.

When replacing is finished, clean the printer referring to ***Cleaning the Printer***